

# Measuring Information; Installation Types

How to Measure for Uncovered Windows

Regular Window: How to Measure for Uncovered Window

1. Determine headrail type and the clear opening width for one-way draw or split draw (See diagrams) - the additional 3" shown for privacy is recommended if ordering one-way draw.

2. Match the clear opening width with dimension found under "C.O." COLUMN. For even spacing, round up width measurement

to the next size in the stack chart. Split draw will have even numbers of vanes.

3. Order the corresponding dimension found in the "F.B.W."  
(Finished Blind Width).


Example: One-Way Draw Magnum™ 3 1/2"

If determined width for clear opening window view is 54 3/8",

order width needed to provide full unobstructed view is 63 1/8".

**NOTE:** For one-way draw blinds add an additional 3" to the C.O. (clear opening) before calculating the FBW.

ONE WAY DRAW Finished Blind Width (F.B.W.)

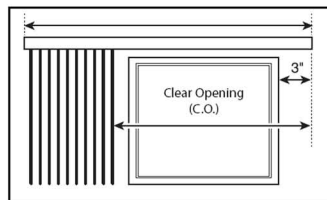

SPLIT DRAW  
(recommended for balanced appearance)  
Finished Blind Width (F.B.W.)

